QUICK START GUIDE - READ FIRST

1) Product Guide



This is NOT a blender.

Do **NOT** process a solid block of ice or ice cubes. Do **NOT** make a smoothie or process hard, loose ingredients such as frozen fruit. Fruit must be crushed to release its juice or combined with other ingredients and frozen before processing.




2) Display Guide

One-Touch Programs

Each program is intelligently designed to whip up delicious creations in 1 to $2^{1}/_{2}$ minutes. Programs vary in length and speed depending on the optimal settings to get perfectly creamy results for that type of recipe.

When the program is running, the paddle will move down through a frozen base and return back to the top to create chef-approved treats.

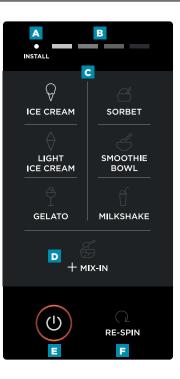

A Install Light

Blinking light – Indicates the bowl is not properly installed.

Solid Light – Indicates the paddle is not installed correctly.

B Progress Bar

Indicates progress of the program selected. When a program is finished, all 4 segments will flash twice and then turn off.

C Pre-set Programs

Select the program that suits your recipe and the paddle will process the base to create the ideal texture in $1 - 2\frac{1}{2}$ minutes.

When you're ready to get started refer to the recipe guide for ideas of what you can make with each program.

D MIX-IN

Use after you've processed your dessert to mix-in extras like chocolate chips, nuts or sweets.

E Power Button

Use to turn unit on and off.

F RE-SPIN

Useful if the base looks crumbly after running a program. This can happen if the base is really cold. Do not RE-SPIN if using MIX-IN.

Refer to the recipe guide for more detailed information on each function.

3) Assembly



1. Plug in unit

Make sure to plug in the unit before assembly and switch Power on The unit will NOT recognise the outer bowl and therefore will not work if it is installed before the unit is plugged in. 2. Install tub Remove lid from tub and check that the ingredients in the tub have not been frozen at an angle. Place

the tub containing

 
the frozen base in

the outer bowl.



Install paddle

Press and hold the paddle latch on the top of the outer bowl lid, then insert the paddle in the bottom of the lid. Release the latch to secure the paddle. Latch will be in the centre when the paddle is correctly installed.





Position the tab of the lid just slightly to the right of the outer bowl handle so the lines on the lid and handle align. Rotate the lid clockwise to lock.



5. Install outer bowl

After plugging in the unit, place the outer bowl on the motor base with the handle in the middle of the unit. Twist handle to the right to raise the platform and lock the bowl in place. You will hear a click when the bowl is correctly installed.

4) Processing



6. Choose program

Select a program and processing will begin. When complete, all 4 segments of the progress bar will flash twice and then turn off.





When the program ends, hold the release button on the left of the motor base and twist bowl handle clockwise to remove. 8. Remove lid Press the lid unlock button and twist to remove lid.

Make sure to plug in the unit before assembly. If the programs do not illuminate when the power is turned on, make sure the unit is properly assembled. If the install light is flashing, the outer bowl needs to be properly installed. If the install light is steadily illuminated, the paddle needs to be properly installed.



5) Disassembly & Cleaning

Remove tub & paddle

Lift the tub out of the outer bowl.

Rinse the outer bowl lid to remove any sticky residue or pieces wedged in the paddle. Then remove the paddle by pressing the paddle latch on top of the lid.

All parts are dishwasher safe on the top-rack and can also be hand-washed.

Now you're ready!

Choose a recipe from the Recipe Guide and keep this Quick Start Guide nearby for reference.

