




1

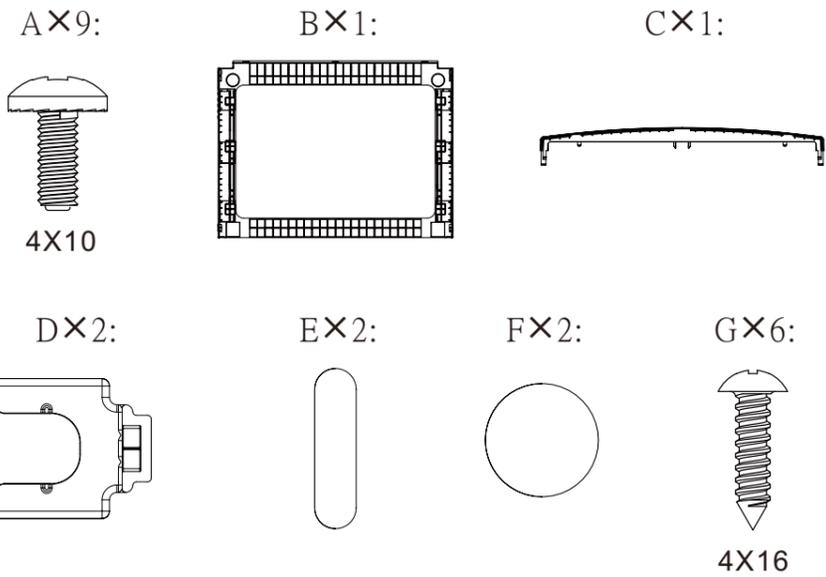

! Make sure that the power supply is disconnected before installation!

DK: Suk strømmen til maskinen inden installation!

2

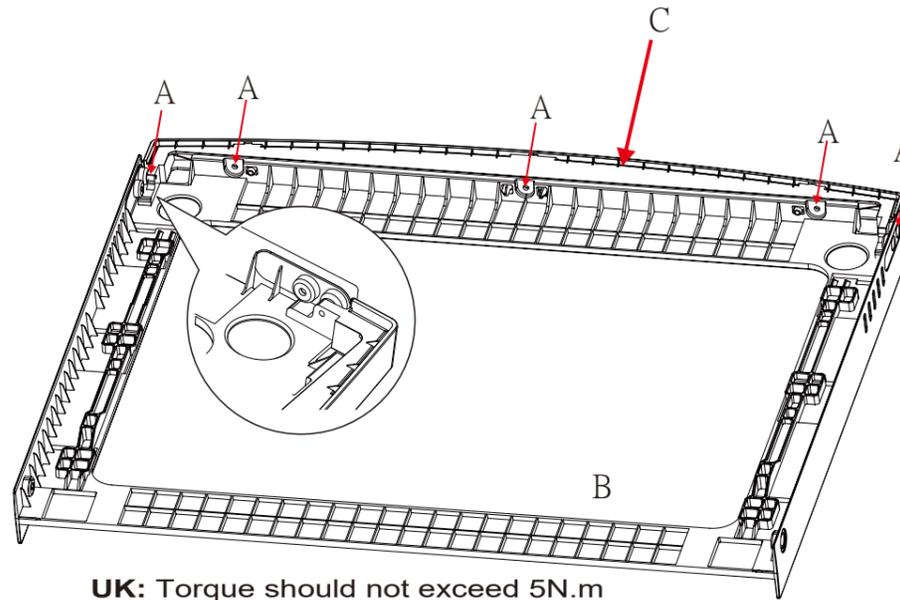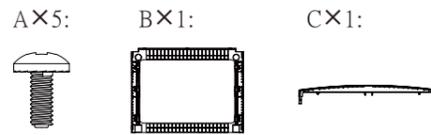

UK: Torque should not exceed 5N.m

DK: Moment bør ikke overstige 5N.m


3




UK: Clean the top cover of washer

DK: Rengør toppladen på vaskemaskinen

4

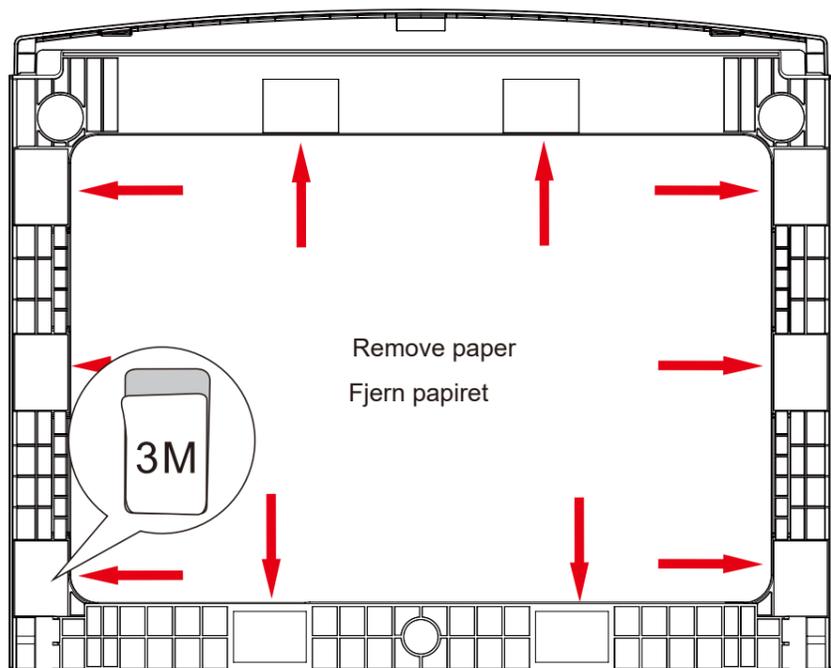


5

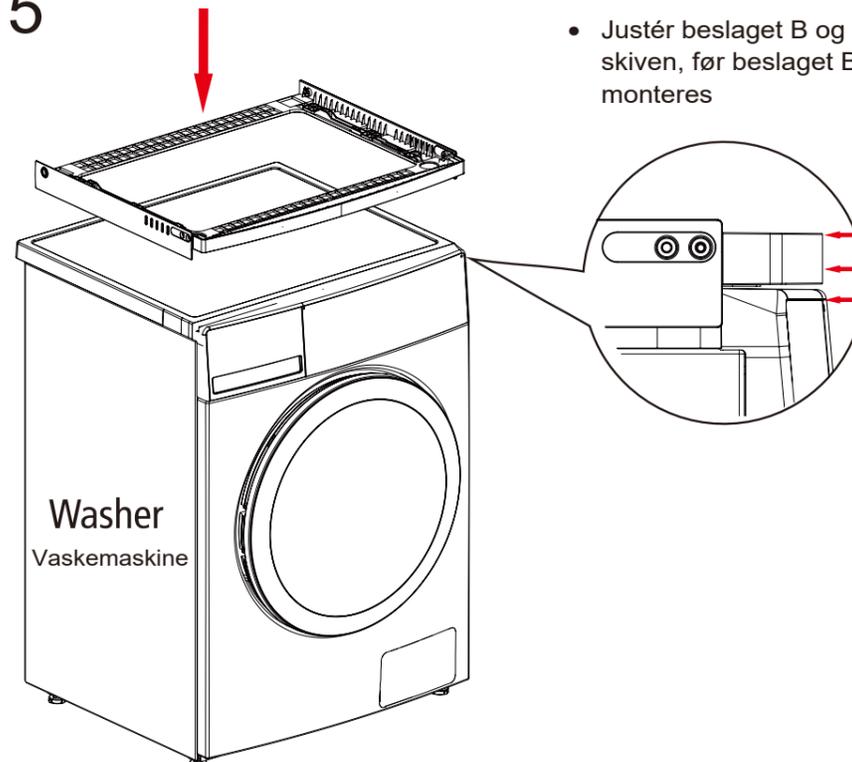

Note: Align the bracket B and the washer before attaching the bracket B

6

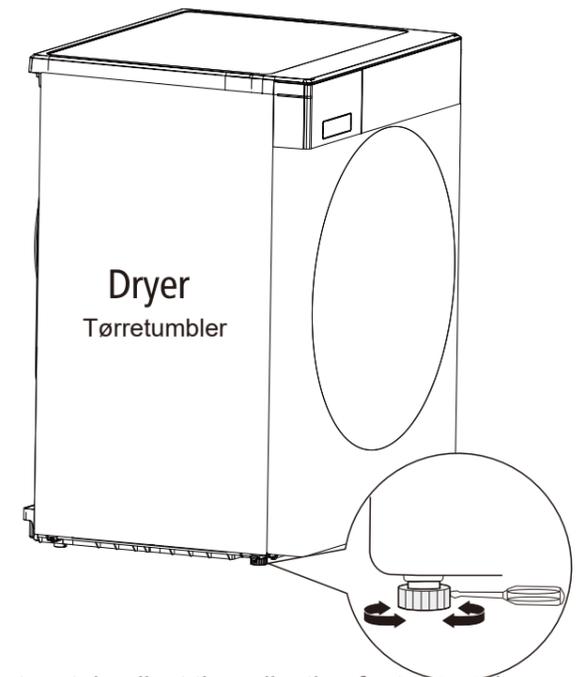


If the dryer base is not metal, adjust the adjusting feet of the dryer to the lowest position.

Hvis tørretumblers bund ikke er af metal, skal du justere tørretumblers justeringsfødder til den laveste position

7

DK: Hvis tørretumblers bund er af metal:


1. Skru de to forreste justeringsfødder af tørretumbleren (nedad)
2. Indsæt de to fastgørelsesdele D
3. Spænd de to justeringsfødder (opad)

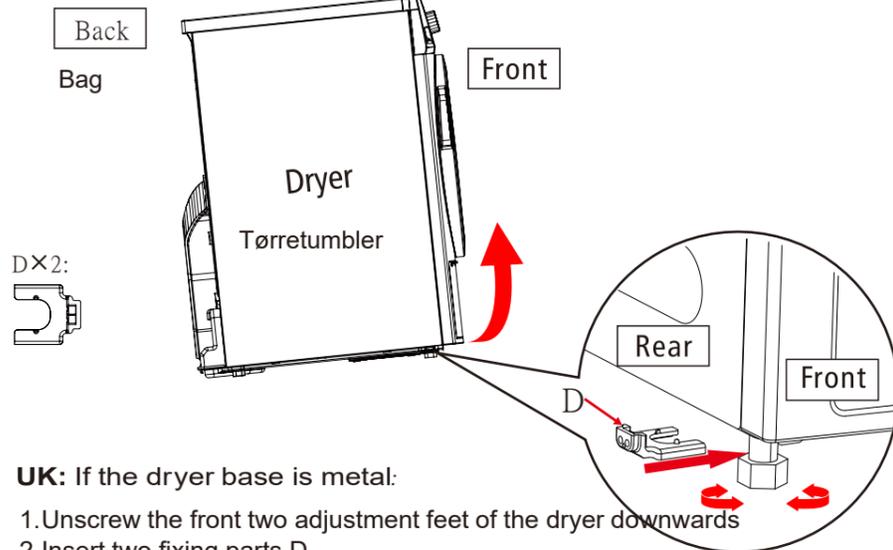

UK: If the dryer base is metal:

1. Unscrew the front two adjustment feet of the dryer downwards
2. Insert two fixing parts D
3. Tighten the two adjustment feet upwards

8

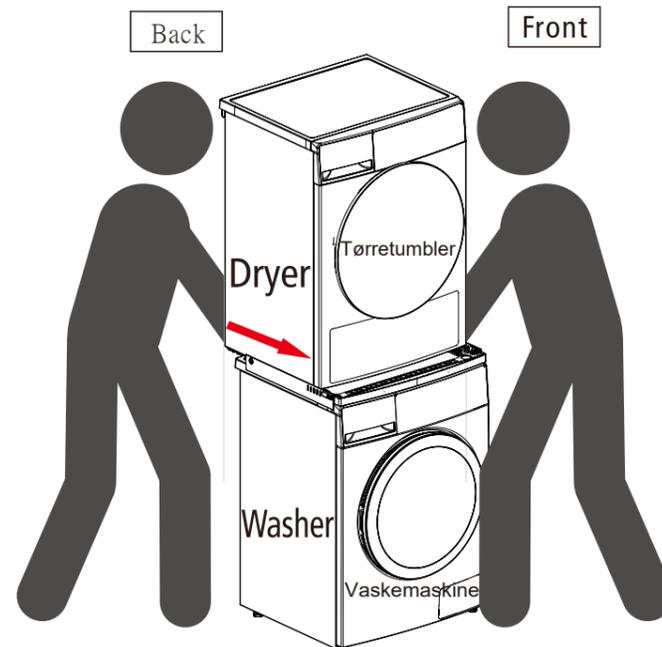


UK: Place the dryer at the back of the top of the washer, and then push the dryer forward until the hole matches the hole

DK: Placer tørretumbleren bagerst på toppen af vaskemaskinen, og skub derefter tørretumbleren fremad, indtil hullet passer til hullet

9


UK: If the dryer base is not metal, tighten the front and rear four screws (G)

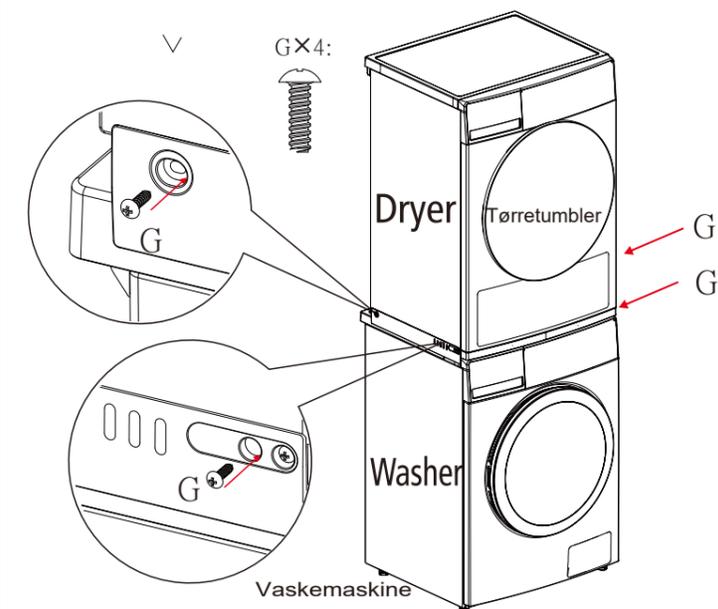

DK: Hvis tørretumblers bund ikke er af metal, spændes de fire forreste og bagerste skruer i (G)

10

UK: If the dryer base is metal, only tighten the front two screws (A).

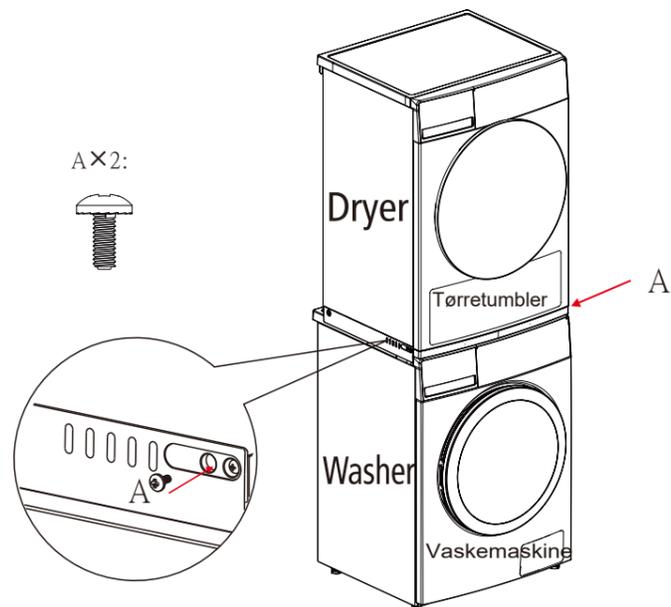

DK: Hvis tørretumblers bund er af metal, stram kun de to forreste skruer (A)

11

E x 2: F x 2:

