








ASSEMBLY INSTRUCTIONS

MODEL : COPENHAGEN CHAIR

HARDWARE LIST


A	JCBC M6 x 50MM		4 PCS
B	JCBC M6 x 25MM		4 PCS
C	SPRING WASHER 1/4		8 PCS
D	M4 X 50MM C/B SCREW		4 PCS
E	ALLEN KEY		1 PC
F	15.5MM WOOD BUTTON		4 PCS

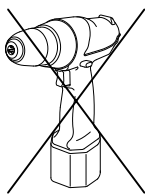




IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.
- * TIGHTEN NUT OR NUT BOLT ON EVEN SURFACE.





STEP 1

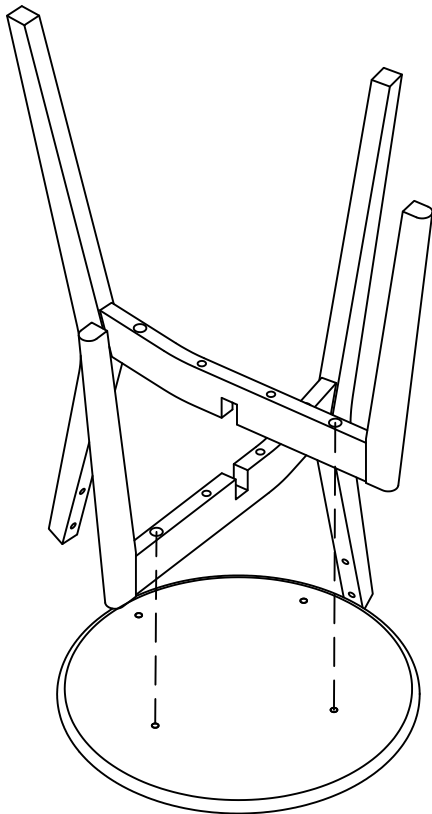

STEP 2

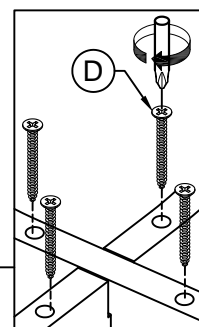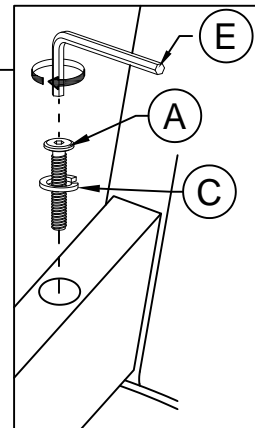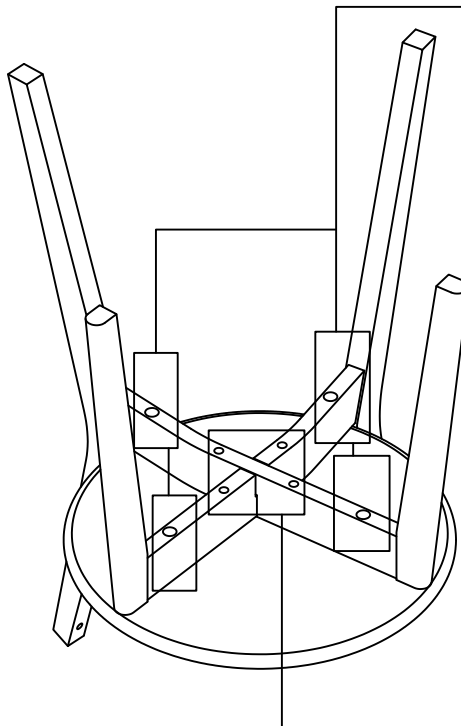

STEP 3

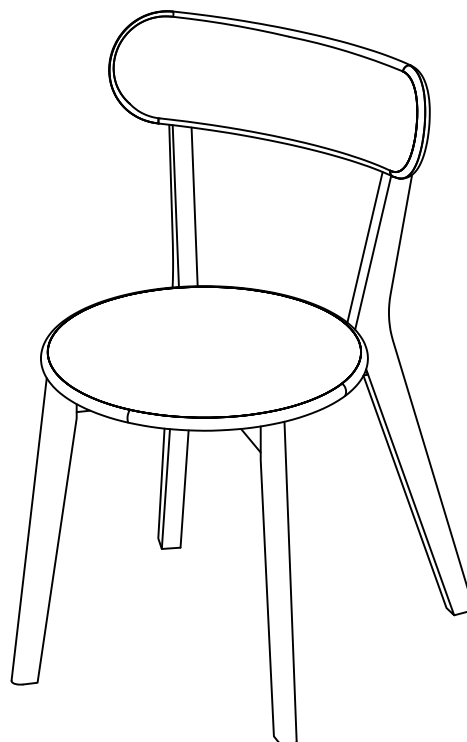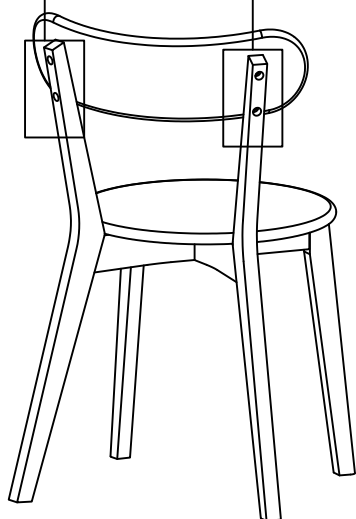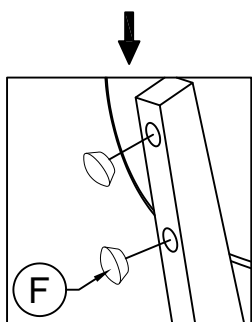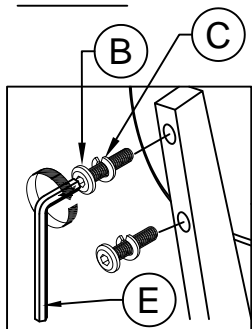

COMPLETED
CHAIR ASSEMBLY.