

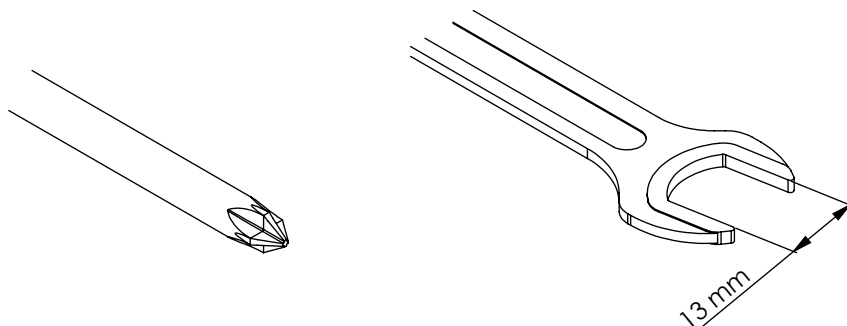



Smart 2





Attrezzi necessari (non inclusi)
Necessary tools (not included)
Outils nécessaires (pas compris)

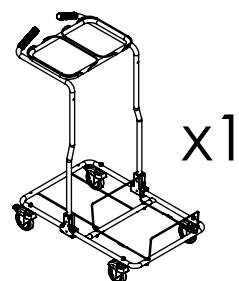

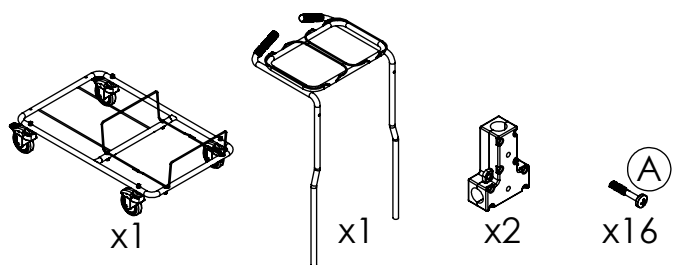

1

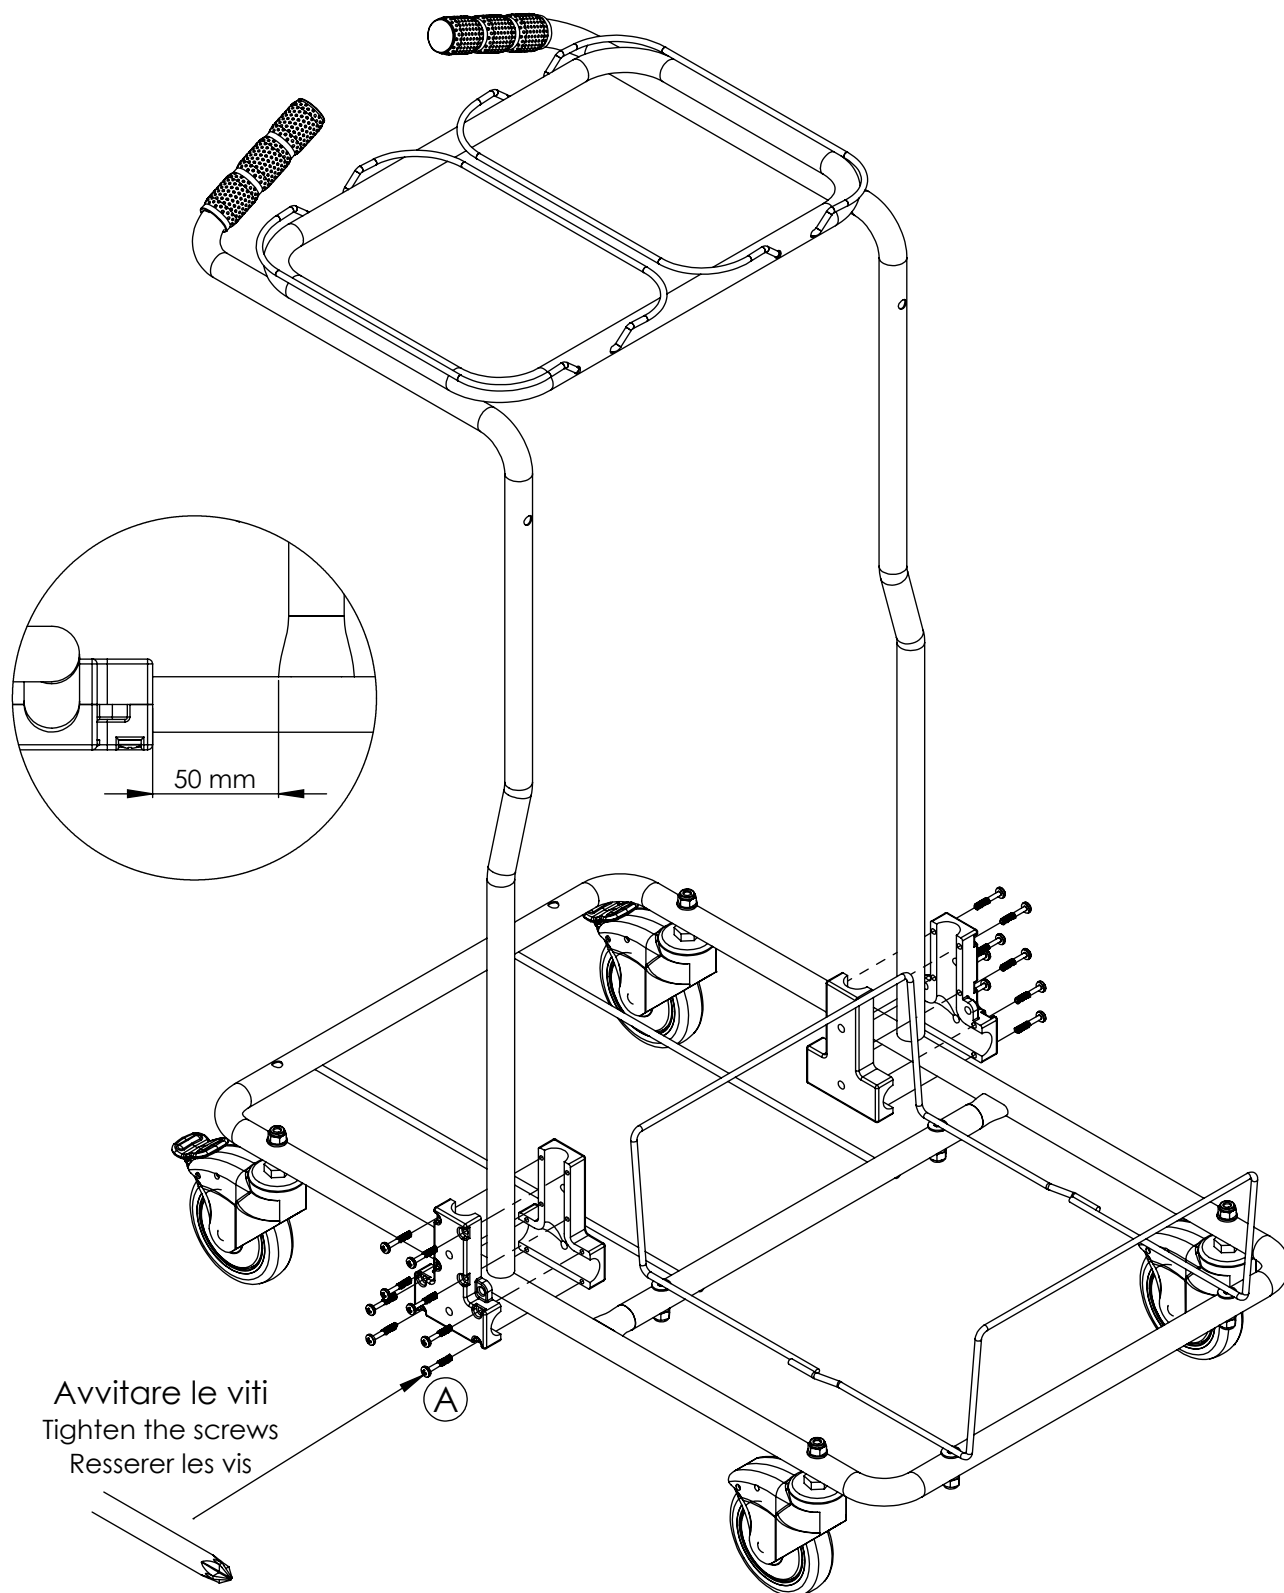


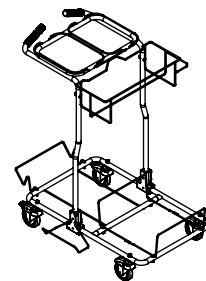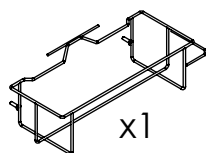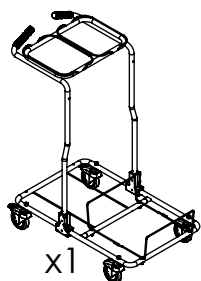


x1




2

Avvitare le viti
Tighten the screws
Resserer les vis

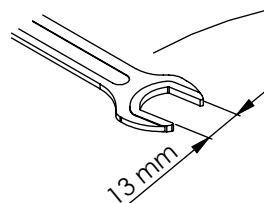



13 mm




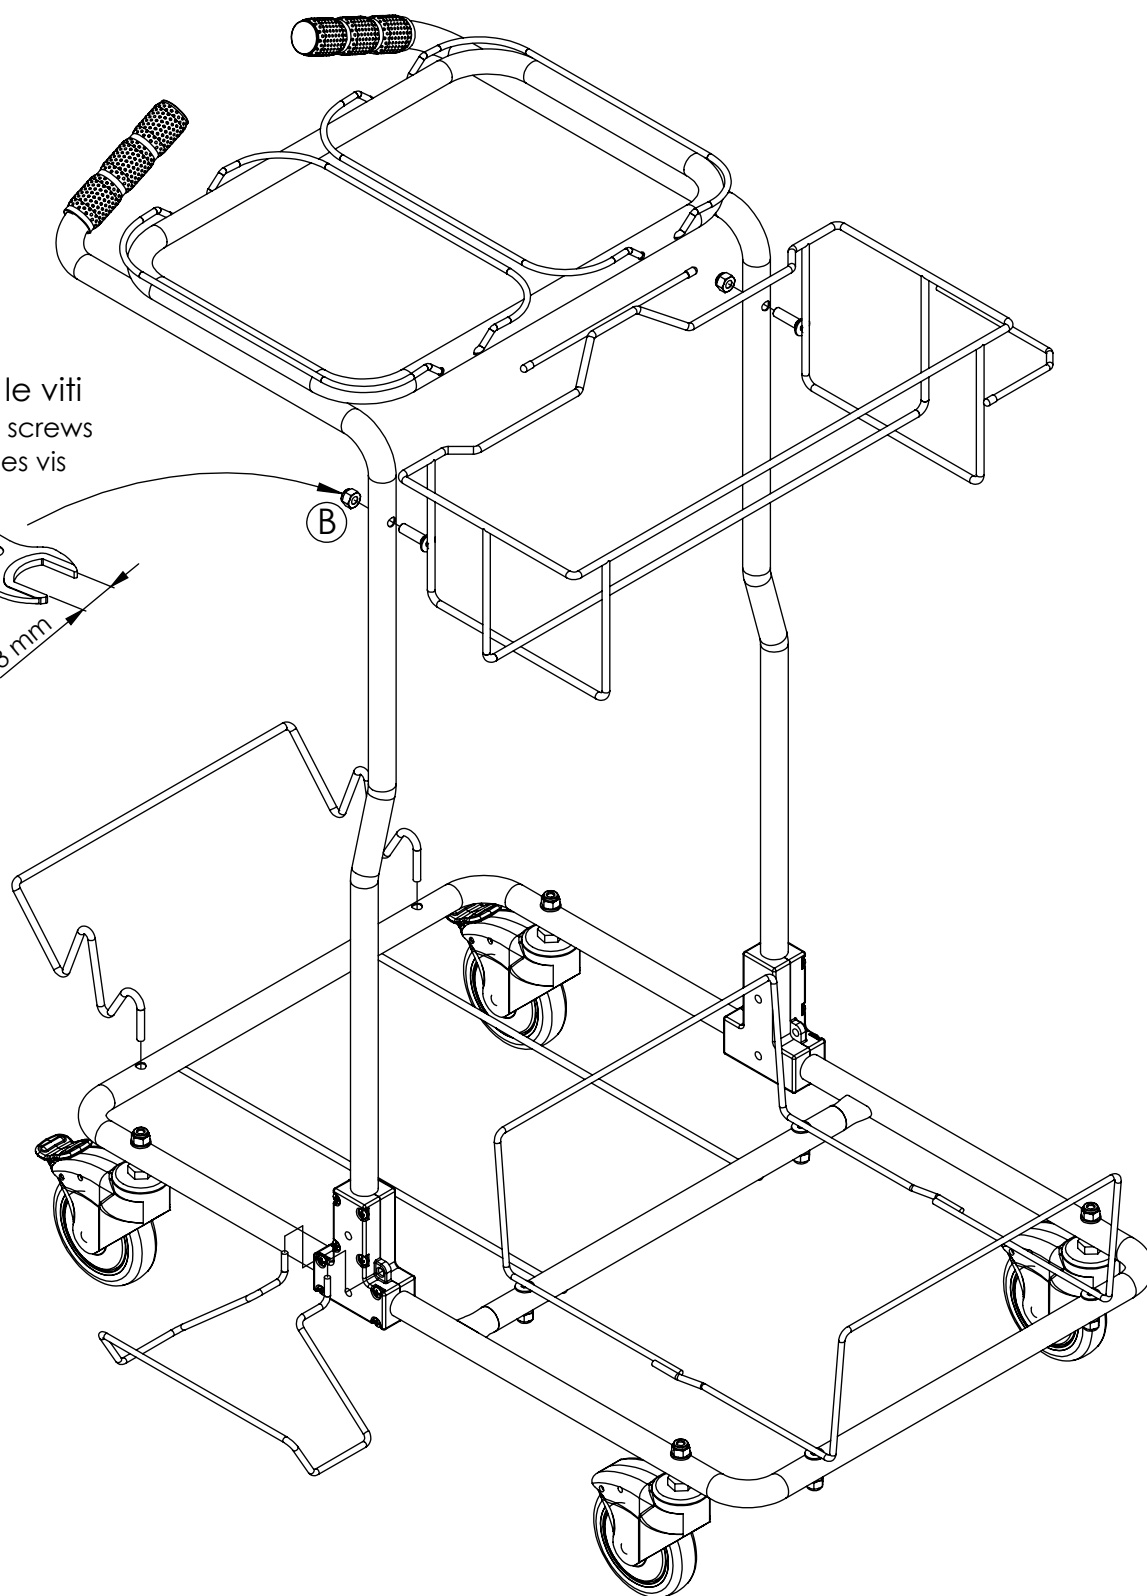


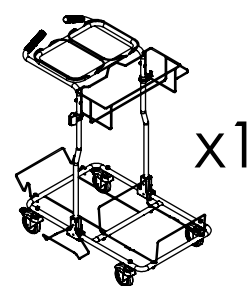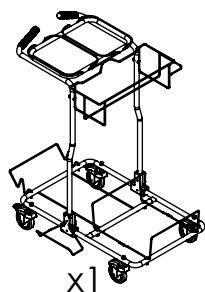

3

Avvitare le viti
Tighten the screws
Resserer les vis

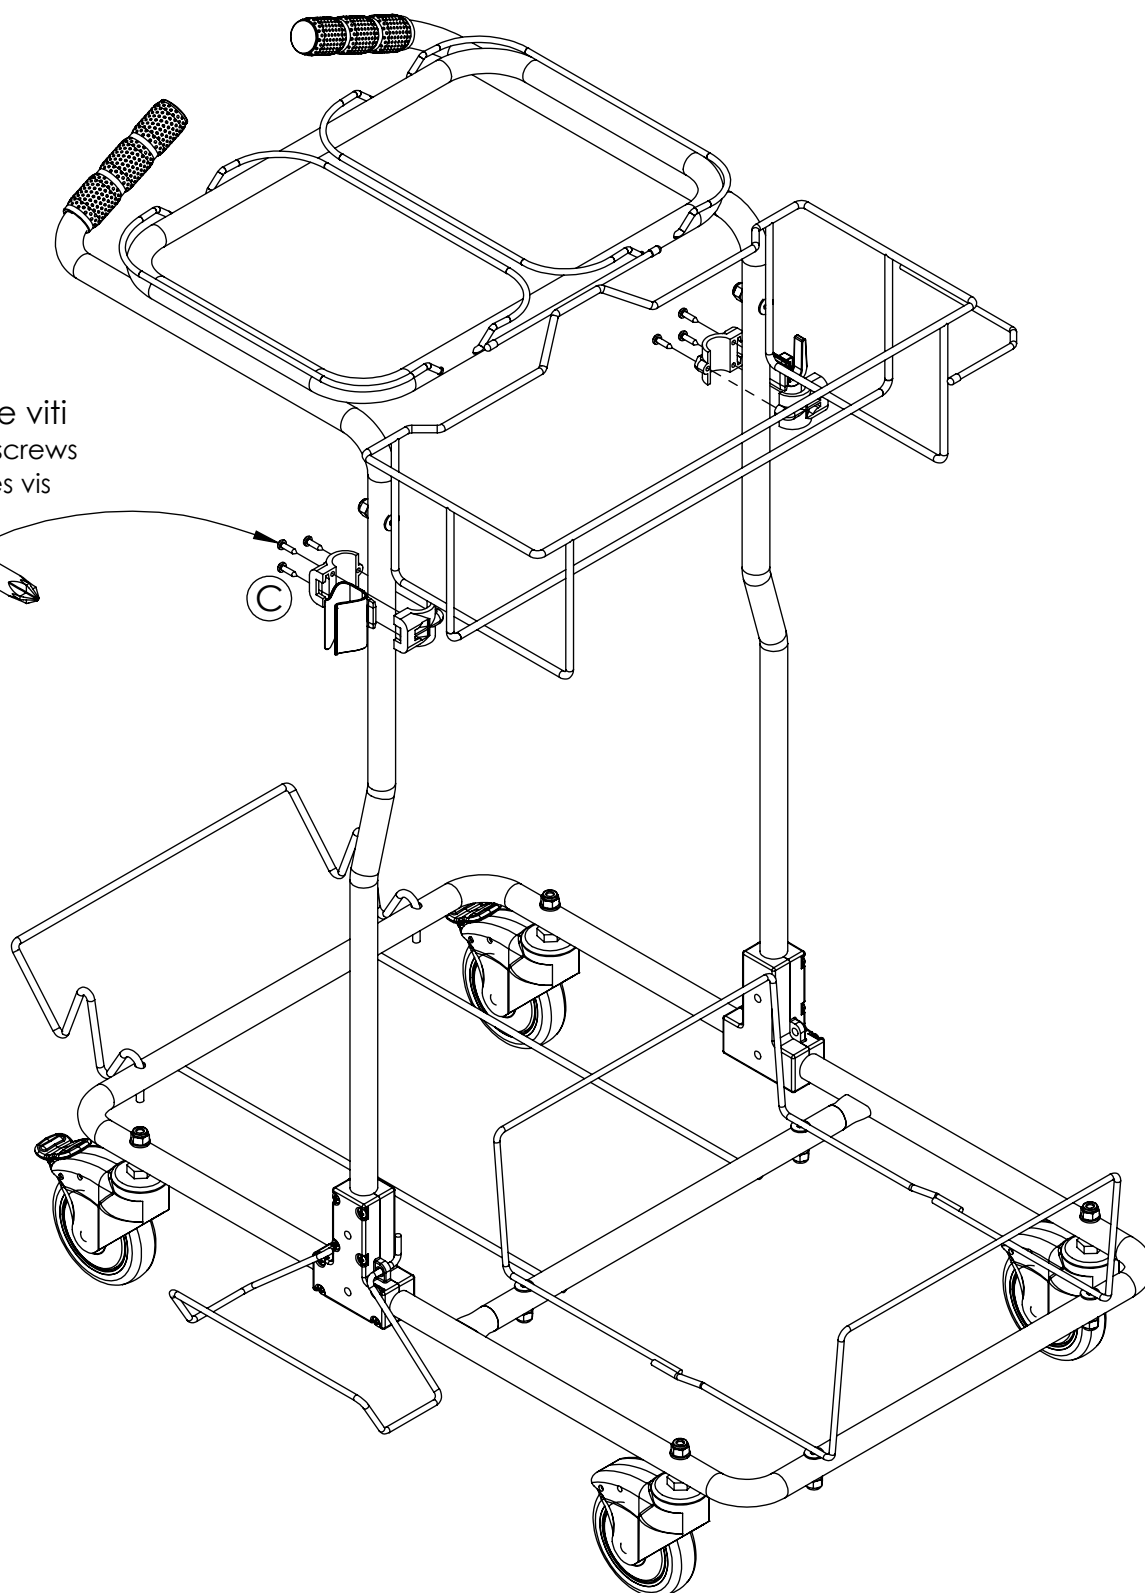

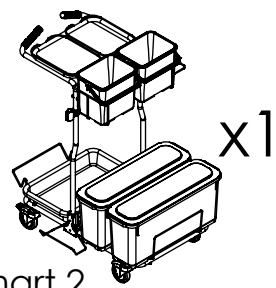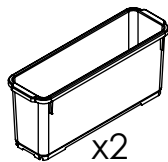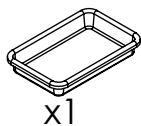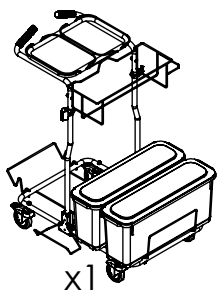

Smart 2

4

